


INSTALLATION INSTRUCTIONS	
A	INSTALL LEFT AND RIGHT BRACKETS USING PROVIDED (4) 8-32 3/16 SCREWS. HOLES WILL NEED TO BE ADDED.
B	INSTALL ISOLATION BRACKET USING PROVIDED (32) 8-32 3/16 SCREWS. HOLES WILL NEED TO BE ADDED. BRACKET MUST BE INSTALLED BETWEEN CUTOUTS ON PANEL MOUNTING BRACKET.
C	INSTALL PANEL MOUNTING BRACKET. ATTACH TO LEFT AND RIGHT BRACKETS USING (2) #6 SELF TAPPING SCREWS PROVIDED. ATTACH TO BOTTOM OF BOX USING (3) 8-32 3/16 SCREWS PROVIDED. HOLES WILL NEED TO BE ADDED.
D	ATTACH ACCESS PANEL TO LEFT AND RIGHT BRACKET AND PANEL MOUNTING BRACKET USING (6) #6 SCREWS PROVIDED.

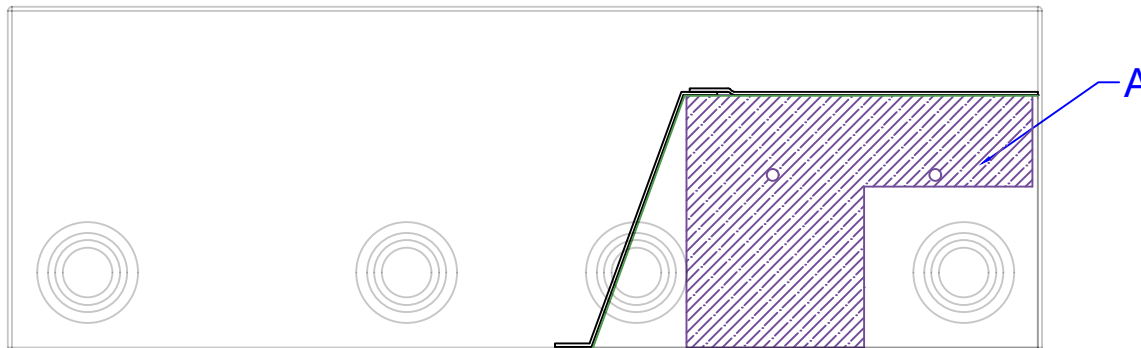

REVISION: 11/2019	MATERIAL : - 16ga Powder Coated Steel	COMPATIBLE ROUGH IN BOXES:  104BBX / 104BBXW	DESCRIPTION: Horizontal Panel Bracket Kit for Double Wide Size 6.00" Deep Back Box. Bracket installation to support Neutrik Pocket Body construction phase sub-assembly.	REV 1 SHEET 1 OF 1
-------------------	--	--	---	-----------------------------